

# GR-1

# Basic Foot Controller



## Manual

© 2014 Vibesware  
Markus Pahl  
Schillerstrasse 18  
D-31141 Hildesheim  
Germany

[www.vibesware.com](http://www.vibesware.com)  
[info@vibesware.com](mailto:info@vibesware.com)

Rev. 1.1

Thanks for choosing Vibesware ! Enjoy gorgeous sustaining feedback with the GR-1. The Basic Foot Controller gives you an extensive control of feedback harmonics with a control feeling like a WahWah pedal.



The feedback pitch range that can be obtained with a single string is really impressive and will expand the way of playing with your Guitar Resonator significantly. The feedback turns to different harmonics without the need of changing the position of the Resonator Head to the guitar neck.

Simply connect the pedal between Resonator Box and Resonator Head. No extra power supply is needed. Please use two stereo plugs/cables (included). The Basic Foot Controller has three main switching positions: Basic note feedback and two different harmonics. The phase switch at the Resonator Box should be set so that the basic note feedback occurs at the basic position of the controller (pedal in upper position). Depending on pickup and resonator position you can easily switch then to middle and down position.

Alternatively, you might prefer to pre-select the phase at the Resonator Box differently. Then, the basic note feedback occurs in the middle position of the foot controller. Note that the phase also depends on the pick-up „polarity“ (coil turning direction), which means that the pre-selected position can vary depending on your selected pickup. In that case you have another interesting option to change harmonics by pickup selection !